

# Huawei RH2288H v3

## Manually setting FAN speed

Usage: `ipmcset -d fanmode -v <mode> [timeout]`

Modes are:

- 0 auto regulate fan speed, without parameter [timeout]
- 1 manual regulate fan speed
  - without parameter [timeout], default timeout(30 seconds)
  - with parameter [timeout], timeout range <0-100000000>, (0 means max timeout)

Usage: `ipmcset -d fanlevel -v <value> [fanid]`

Note :

- 1.Set fan speed level for all fans, without parameter [fanid]
- 2.Set fan speed level for specific fan, with parameter [fanid]  
[fanid] range <1-4>

```
ipmcset -d fanmode -v 1 0
```

```
ipmcset -d fanlevel -v 26
```

Manually setting the fan speed to 26% is sufficient in a controlled environment (22°C) and without GPUs.

---

Revision #1

Created 19 May 2023 15:38:26 by XeroX

Updated 19 May 2023 15:42:57 by XeroX